



LION MOVE

POWERFUL SOLUTION FOR
FULLY AUTOMATED PRODUCTION PROCESS

Developed and built by Lion Lasers in the Netherlands

APPLICATION

The LionMove is a product range of laser engraving systems designed to be built into a machine or production line. Suitable for coding products both stationary and moving (on-the-fly), without adding inks or labels. A single system can code many products per second.

If larger areas need to be "printed" and this cannot be achieved within the desired speed, Lion Lasers offers heavier versions, or multiple systems can be linked together.

In collaboration with specialists, complete production lines are built with vision applications, robotics, and product-specific automation solutions.

LION MOVE BENEFITS

Engraves at high speed, moving along with the product

Robust and compact build

Can be mounted at various angles

Fully autonomous operation




Operated via touchscreen or remotely

Important settings protected with a password


Multiple systems can be linked



DIMENSIONS — LIONMOVE FIBER AND CO2

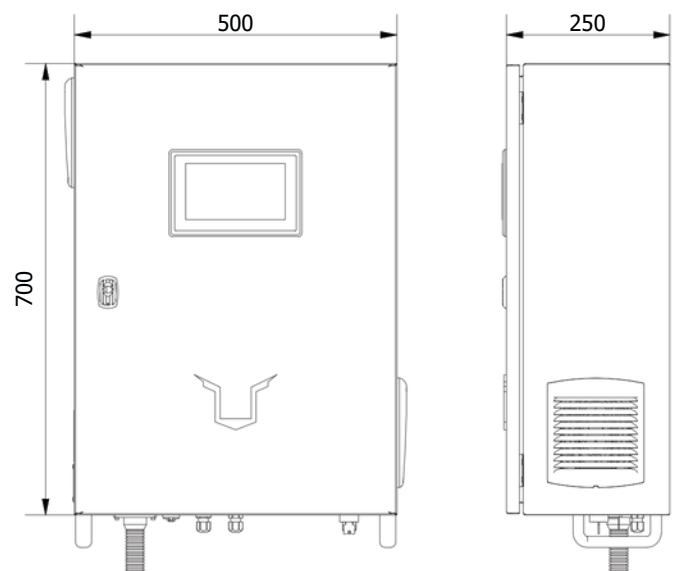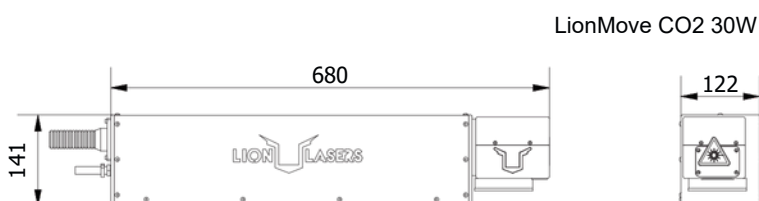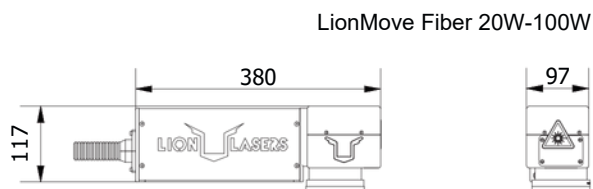

Dimensions in millimeters.

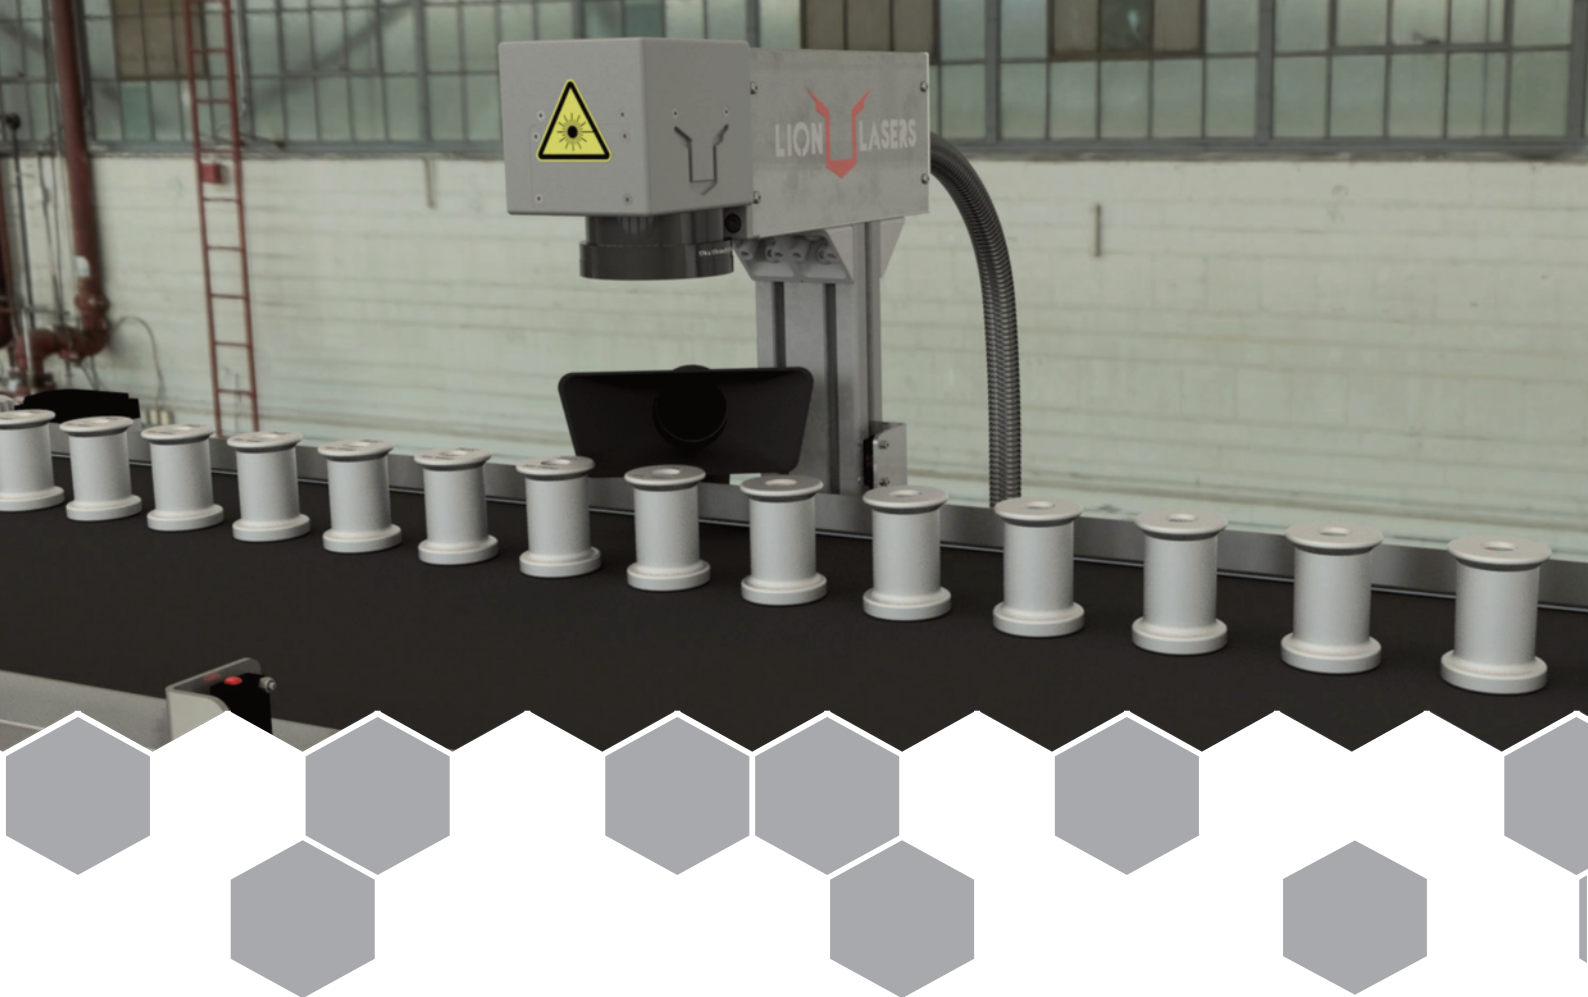

WARRANTY

Lion Lasers offers a 2-year warranty on the Lion Move, subject to the provisions of our General Terms of Delivery and our quotation.

SERVICE

If desired, we're happy to help with integration into your production process. We provide on-site or online training during installation. Even when this is wanted at a different time than the installation, we take care of everything for you.

To keep the production process in good condition, we offer annual maintenance through flexible maintenance contracts.

We provide high-level support both remotely and on-site. When we can't help you further by phone, we'll gladly schedule a visit to your location.

Our staff have extensive knowledge of laser systems. That makes sense, of course, since we design and build our lasers ourselves in the Netherlands. We're proud of that — as proud as a lion!

You can always contact us during office hours

Lion Laser Systems

Nikkelstraat 47
4823 AE BREDA
Nederland

Phone. +31(0)76581 0101
Mail info@lionlasers.nl
Web www.lionlasers.nl

Lion Laser Systems B.V. is ISO-9001 certified and a member of the Koninklijke Metaalunie.

koninklijke
metaalunie



CONFIGURATION

A large number of standard configurations are available for quick delivery.

Work area	170 x 170 mm (multiple dimensions possible)				
Uitvoering	10W UV	30W Industrial	50W Industrial	80W Nano	30W CO2
Laser source	UV-laserFiberlaser	Fiberlaser	Fiberlaser	RF-gestuurde	CO2-laser
Wavelength	355 nm	1.064 nm	1.064 nm	1.064 nm	10.640 nm
Power	10W	30W	50W	80W	30W
Pulse duration	25 ns	200 ns	200 ns	2-400 ns	modulating

In addition to our standard systems, it is possible to have a custom system made with other powers and optics to better match your applications. We can also supply laser systems for resale to your specifications, optionally featuring your own logo and colors.

Fiber lasers with adjustable (nanosecond) pulses or fixed pulse (200 ns), with average powers of 20W, 30W, 50W, 60W, 80W, 100W, 120W, and 200W

UV lasers with powers of 3W, 5W, 10W, 15W, and 20W

CO2 lasers with powers of 55W, 70W, 100W (300W peak), 200W (450W peak), and 300W (700W peak)

CONNECTIONS

Power supply	Standard: 230 VAC supply, 10 A (switched by the overhead system). Optional: switching with 24 VDC control voltage with fixed 230 VAC supply.
Main switch:	Key switch on connection panel
Data connection	USB en Ethernet
Input signals	1 digital input 5–24 V for trigger (start marking) 3 digital inputs 5–24 V for file selection of 7 files on a BCD basis 1 encoder input A/B connector M12p8 (suitable for various encoders, plug-and-play for e.g. Sick DBV50E-22RPA2000 encoder) 2 interlock inputs (potential-free contacts for fencing, etc.)
Output signals	1 changeover-contact output "Laser OK" 250V 2A 1 digital output "Laser is active" max 35V 50 mA (laser emission on) 1 digital output max 35V 50 mA "Ready for marking" (file loaded) 1 digital output max 35V 50 mA "Marking" (file being executed)

ACCESSORIES


Encoder for measuring the speed of a production line (conveyor belt)

Sick encoder



Start trigger for moving parts

Panasonic Through Beam sensor

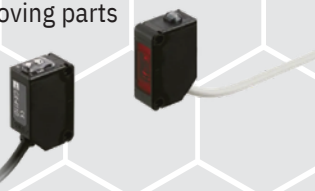

SEE WHAT THE LION MOVE DOES WITH YOUR PRODUCT

You don't choose a laser system for just a moment. And a brochure shows what a laser can do — not whether it works for your application.


No specification proves that; only your own product under the laser does. That's why we're inviting you.

Bring your product to Breda or send it in.

We'll put our laser to it while you watch — your part, your challenge, solved live. No assumptions, no showroom example.

What to expect:

- Your own product, marked — not a showroom example, but your material with your logo, serial number, or data matrix.
- The exact cycle time for your part, so you can calculate for yourself what it delivers in production.
- Certainty about quality — contrast, legibility, and whether the marking stays put: wear-resistant and cleaning-resistant.
- An answer to the how question — how the laser fits into your production line.
- A tangible example to take with you — to convince your colleagues and management at a glance.

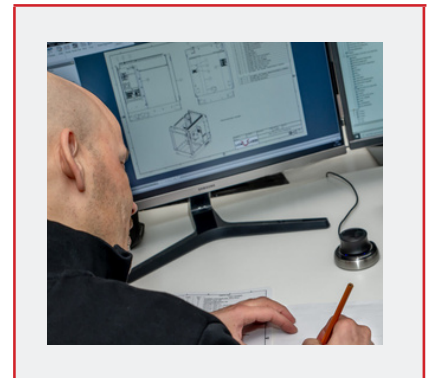

Schedule demo →

Lion Laser Systems B.V.

Nikkelstraat 47
4823 AE BREDA
Nederland

Phone. +31(0)765810101
Mail info@lionlasers.nl
Web www.lionlasers.nl

Lion Laser Systems B.V. is ISO-9001 certified and a member of the Koninklijke Metaalunie.

koninklijke
metaalunie

